

TWIST LOCK




Twist Locks




Twist locks connect containers to the carrier vehicle. Twist locks must always be used as explained in the operating manual of the respective vehicle.

Twist Locks for Container Chassis

- Heavy, standard and low executions (retractable and non-retractable)
- Twist locks for gooseneck chassis:
 - Front twist locks
 - Height adjustments with / without twist locks
- Special types:
 - Twist locks with removable / changeable inner parts

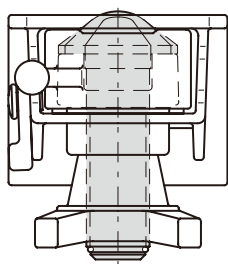


Retractable

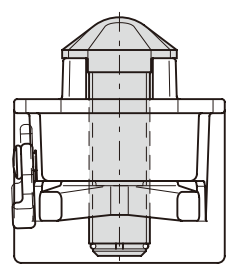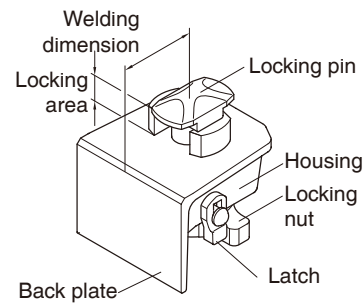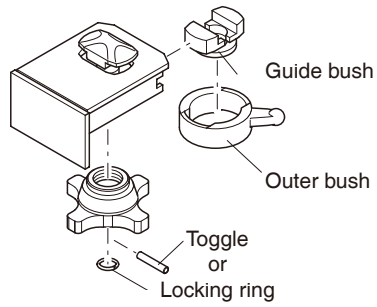


Non-Retractable

Drawing

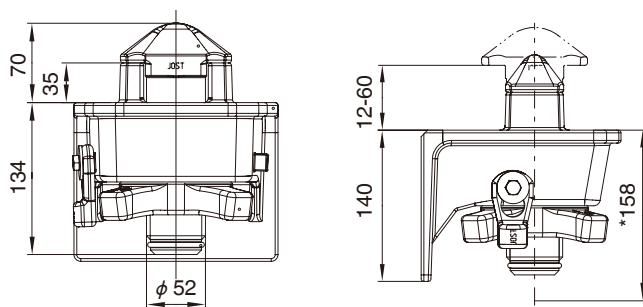


F 02 SK-R

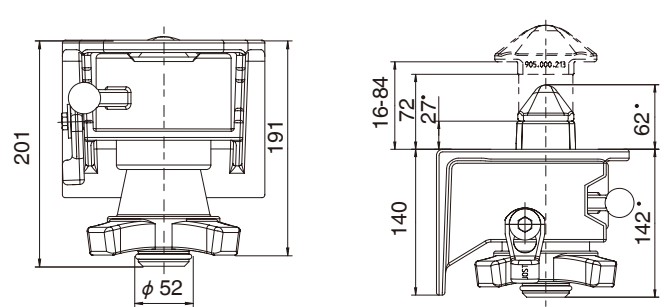


VA 01 SK

Order No.	Weight kg	Versions
F 02 SK-R	13	Non-retractable

Order No.	Weight kg	Versions
VA 01 SK	16.2	Retractable

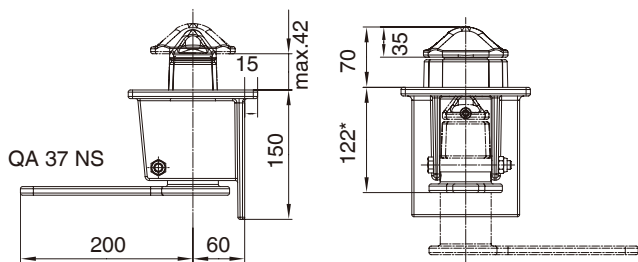

QA 37 NS

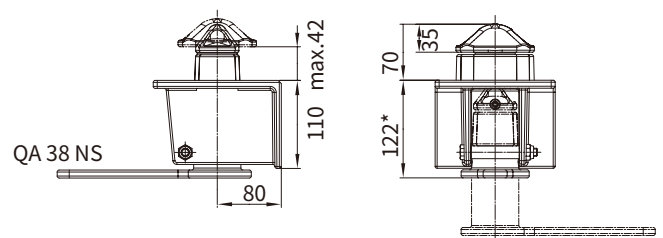

QA 38 NS

Order No.	Weight kg	Versions
QA 37 NS	7.9	Flat, Straight Handle
QA 37 NS-1	8.5	Flat, Angled Handle

Order No.	Weight kg	Versions
QA 38 NS	8.4	Flat, Straight Handle
QA 38 NS-1	9.0	Flat, Angled Handle